


# HANDY FAMIEIGHT



## INSTRUCTION MANUAL

PLEASE DETAIL READING THE INSTRUCTION MANUAL  
BEFORE USE OR SET-UP WITH THIS PRODUCT

### FUNCTION BUTTON FEATURES

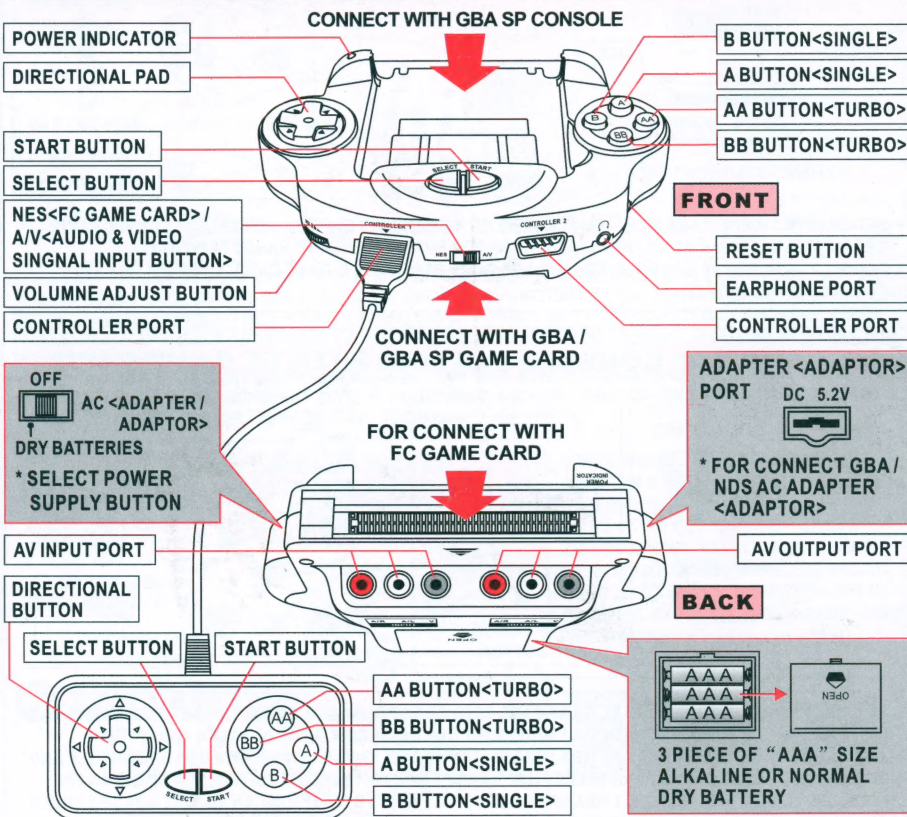




## FEATURES


1. ERGONOMIC AND COMFORTABLE STYLE DESIGN.
2. PRECISE FOUR WAY OF ARCADE DIRECTIONAL PAD.
3. SUPER HEAVY BASS OF STEREO SPEAKER BUILT-IN.
4. SINGLE AND TURBO ACTION BUTTON GIVE YOU NEW EXPERIENCE.
5. COME WITH TWO PIECE OF PRECISE FOUR WAY DIGITAL CONTROLLER.
6. ONE PLAYER OR TWO PLAYER DEPEND ON YOU AND YOUR FRIEND REQUEST.
7. USE GBA SP CONSOLE PLAY WITH YOUR FAVORITE OF FC / NES GAMES.
8. USE YOUR PS II, PS I, XB, NGC, DVD PLAYER, VIDEO CAMCORDER AND OTHER TV-GAME CONSOLE SYSTEM DISPLAY ON GBA SP CONSOLE.
9. TAKE YOU BACK TO FC / NES WONDERFUL TV GAMES DREAM WORLD.

## HOW TO SET-UP

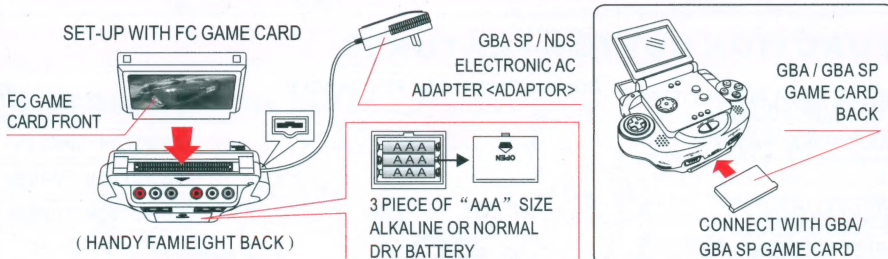

\* SET-UP WITH 3 PIECE "AAA SIZE" OF ALKALINE OR NORMAL DRY BATTERY. <OR SELECT CONNECT WITH GBA / NDS ELECTRONIC AC ADAPTER <ADAPTOR> FOR SUPPLY POWER TO HANDY FAMILIEIGHT>. CONNECT WITH GBA SP CONSOLE, GBA / GBA SP GAME CARD AND FC GAME CARD, CONFIRM GBA SP CONSOLE IS FULL POWER.


## 1 USE GBA SP CONSOLE PLAYING WITH FC GAME CARD

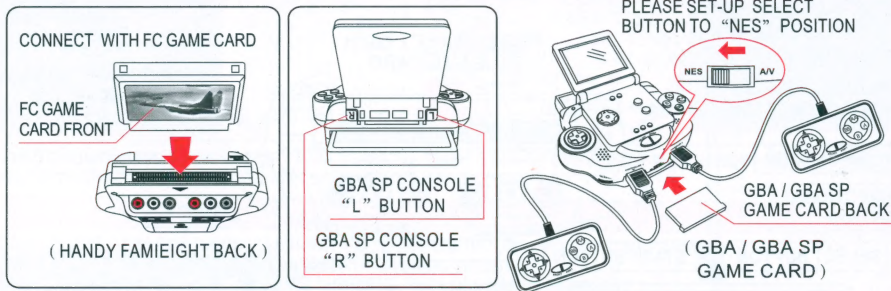

SELECT "NES MODE" FOR PLAYING FC GAME CARD WITH GBA SP CONSOLE, FIRSTLY, PLEASE CONFIRM GBA SP CONSOLE AND HANDY FAMILIEIGHT WITH FULL POWER (BY DRY BATTERIES OR AC ADAPTER <ADAPTOR>), SECONDLY, SET-UP FC GAME CARD AND GBA / GBA SP GAME CARD. THIRDLY, POWER ON GBA SP CONSOLE AND HANDY FAMILIEIGHT. FINALLY, YOU CAN SELECT USE HANDY FAMILIEIGHT DIRECT CONTROLLER OR SEPARATE CONTROLLER TO PLAYING. <SUBJECT GBA SP CONSOLE "L" AND "R" BUTTON CAN ADJUST GBA SP SCREEN "CONTRACT, SAT, HUE & BRIGHT" BY PRESS WITH GBA SP CONSOLE "FUNCTION BUTTON A OR B">




## 2 HANDY FAMEIGHT CONNECT WITH GBA SP CONSOLE AND HOME TELEVISION

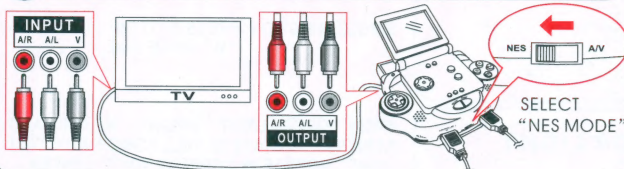


CONFIRM GBA SP CONSOLE AND HANDY FAMEIGHT IS FULL POWER AND IN POWER-OFF STATE. CONNECT WITH HOME TV BY AV-CABLE SELECT "NES MODE" IN HANDY FAMEIGHT. TURN ON TV, GBA SP AND HANDY FAMEIGHT. CHOSE "AV MODE" IN TV. AT THE SAME TIME, TV AND GBA SP CONSOLE WILL DISPLAY SAME PHOTO, NOW, YOU CAN ENJOY YOUR FC / NES GAME BY HANDY FAMEIGHT.

## 3 HANDY FAMEIGHT CONNECT WITH HOME TELEVISION

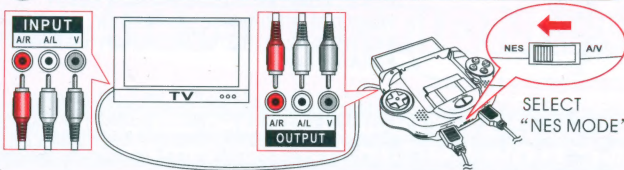

REPEAT STEP 2.

## 4 HANDY FAMEIGHT USE WITH OTHER AV APPLIANCE OR TV-GAME SYSTEM

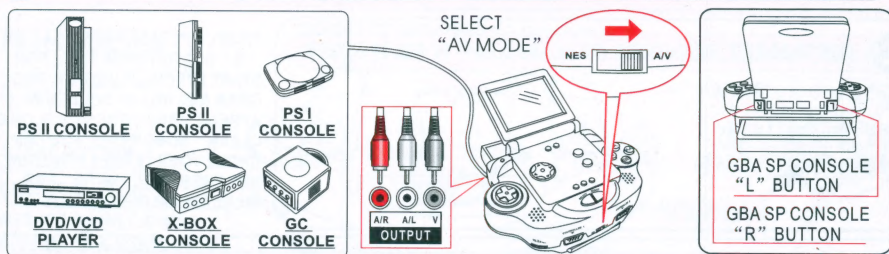


USE GBA SP CONSOLE TO DISPLAY WITH OTHER AV APPLIANCE OR TV-GAME SYSTEM, PLEASE CHOSE "A/V MODE" IN HANDY FAMEIGHT. CONFIRM GBA SP CONSOLE AND HANDY FAMEIGHT IS FULL POWER AND IN POWER OFF STATE. CONNECT HANDY FAMEIGHT WITH YOUR FRAVIOUTE AV APPLIANCE OR TV-GAME SYSTEM BY AV-CABLE, THEN, POWER ON ALL APPLIANCE AND CONSOLE SYSTEM. MOST IMPORTANT IS NEED INSERT GBA / GBA SP GAME CARD IN HANDY FAMEIGHT.

**NOTICE:** A. HANDY FAMEIGHT CONTROLLER CANNOT CONTROL OTHER TV-GAME SYSTEM.


B. USER CAN ADJUST GBA SP SCREEN "CONTRACT, SAT, HUE & BRIGHT" BY PRESS WITH GBA SP CONSOLE BUTTON "A" OR "B" FOR START PROGRAM.

## 5 FUNCTION OF START AND SELECT BUTTON IN HANDY FAMEIGHT

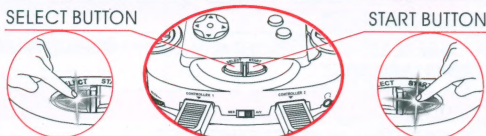

WHEN PRESS "START BUTTON" MEANS CONFIRM START THE FC / NES GAME AND "BLUE LIGHT" IS BRIGHT, WHEN PRESS "SELECT BUTTON" MEANS CONFIRM NEED SELECT ONE OR TWO PLAY MODE "WHITE LIGHT" IS BRIGHT <SUBJECT ONE OR TWO PLAY MODE IS SUPPORT BY YOUR FC / NES GAME CARD SOFTWARE>.


## 6 RESET BUTTON

 

WHEN PLAYING FC / NES GAME PRESS "RESET BUTTON". IT WILL RESUME TO GAME START PICTURE OR GAME MANUAL FOR RE-START GAME.




## 7 FUNCTION BUTTON OF TURBO AND SINGLE

 

TURBO FUNCTION : PRESS BUTTON "AA" OR "BB" .


SINGLE FUNCTION: PRESS BUTTON "A" OR "B" ONCE TIME.

## 8 POWER INDICATOR LIGHT

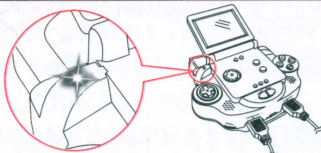


WHEN "GREEN LIGHT" BRIGHT, MEANS HANDY FAMIEIGHT IN STATE OF FULL POWER, BUT "RED LIGHT" APPEAR IN "GREEN LIGHT" CENTER POINT. MEANS POWER IS NOT ENOUGH TO SUPPLY FOR HANDY FAMIEIGHT. PLEASE FIRST TIME TO REPLACE DRY BATTERIES OR CONNECT GBA SP / NDS AC ADAPTER <ADAPTOR> WITH HANDY FAMIEIGHT. OTHERWISE, GBA SP SCREEN OF FC / NES PICTURE WITH STOP MOTION OR HAVE MANY SCRATCH LINE.

## 9 WHAT'S TIME STATE IN POWER-OFF

 

SELECT "DRY BATTERIES" MEANS USE DRY BATTERIES SUPPLY POWER TO HANDY FAMIEIGHT. SELECT "AC" MEANS USE GBA SP / NES AC ADAPTER <ADAPTOR> SUPPLY POWER TO HANDY FAMIEIGHT. <BEFORE PLEASE CONNECT GBA SP / NES AC ADAPTER <ADAPTOR> WITH HANDY FAMIEIGHT FIRST> SELECT "OFF" MEANS POWER-OFF STATE.

## 10 HOW TO ADJUST "BRIGHTNESS, COLOR AND CLEAR" OF GBA SP SCREEN

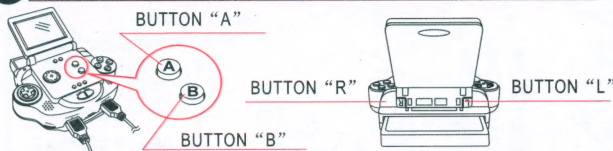


FIRSTLY, PLEASE PRESS "A" OR "B" BUTTON ONCE TIME, FOR START SPECIAL FUNCTION PROGRAM AND GBA SP SCREEN WILL APPEAR "BRIGHTNESS, COLOR OR CLEAR" SOME WORD. YOU CAN CHOSE YOUR TARGET FUNCTION AND PRESS "L" OR "R" FOR INCREASE OR DECREASE.

## 11 HOW TO USE NES GAME CARD IN HANDY FAMIEIGHT<8-BIT GAME CARD AND 72 PIN>
 
### CONVERTER DIAGRAM

FOR USA VER. NES GAME CARD

72 PIN  
USA VER.  
GAME CARD  
FRONT




60 PIN SLOT OF  
JAPAN VER. 8-BIT  
CONSOLE OR  
HANDY FAMIEIGHT  
CONSOLE SYSTEM  
FRONT


FOR JAPAN VERSION 8-BIT CONSOLE OR  
HANDY FAMIEIGHT CONSOLE SYSTEM

NES GAME CARD <USA VER 8 BIT GAME>

72 PIN<USA VER. 8 BIT GAME>

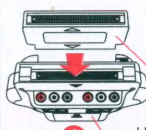

CONVERTER <JAPAN  
VER. CONSOLE USE  
WITH USA VER.  
8 BIT GAME>

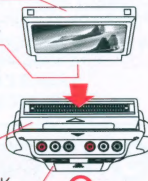

1

HANDY FAMIEIGHT BACK

2

SUBJECT USE WITH "NES GAME CARD" <USA VERSION>. PLEASE SET-UP CONVERTER WITH HANDY FAMIEIGHT FIRST. THEN JUST CONNECT NES GAME CARD WITH CONVERTER AND FAMIEIGHT.

## ATTENTION

1. DON'T PLACE "DRAGON HANDY FAMIEIGHT" INTO HEAT, MOISTURE OR DIRECT SUNSHINE.
2. DON'T DISMANTLE AND CAN NOT CLEAN IT WITH ORGANIC SUBSTANCE.
3. DON'T THROW, DROP OR APPLY STRONG SHOCK TO "DRAGON HANDY FAMIEIGHT" .
4. NEVER USE BATTERIES WITH DIFFERENT TYPES, MODELS AND NEW DEGREE.
5. PLEASE TAKE OUT BATTERIES IF THEY ARE LOW IN VOLTAGE OR WILL NOT BE USED FOR LONG TIME SO AS NOT TO DAMAGE THIS PRODUCT.

This logo is trademark of their respective companies.

This product is not licensed, designed, sponsored, endorsed or manufactured by Nintendo of America Inc.

This product fully designed and manufactured by "SAM GROUP" (DRAGON PRODUCT SERIES)

MADE IN CHINA